


RAM Installation Instructions RM-820 and WAN-840:

1. Power down the SAFARI Montage server and unplug the power supply.
2. Remove the cover by turning the latch release lock, located on top of the system, to the un-locked position, and then lifting up on the latch releasing the cover.
3. Using the diagram below, locate the DIMM (memory) locations on the server's motherboard.

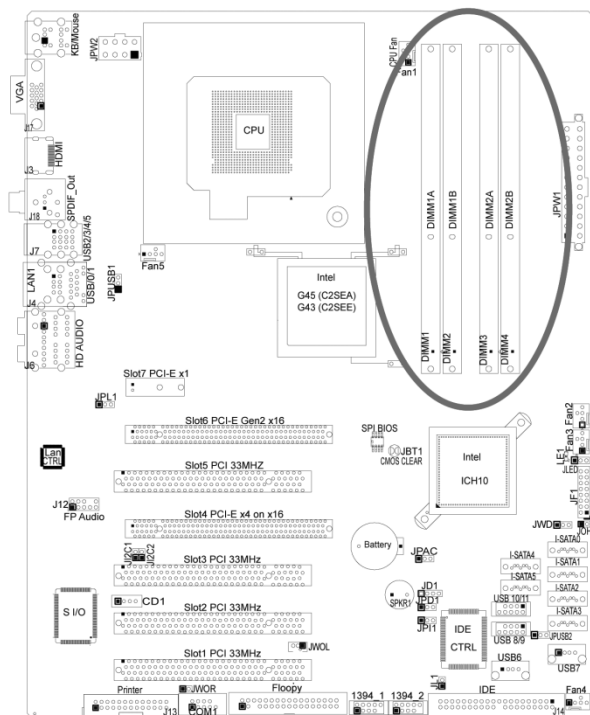

4. Insert the newly received DIMMs by aligning the DIMM's edge connector with the alignment keys on the socket and then insert the DIMM in to the socket by pressing down with your thumbs while pulling up the ejectors with your index fingers until the DIMM locks into the socket. DIMM sockets to be used are DIMM 2, 3 and 4 for the RM-820 and DIMM 3 and 4 for the WAN-840.
5. Replace the cover removed in Steps 2.
6. Apply power and turn the server on.